


P370 (W/keypad) / STI85-0200 Setup (Cordless yellow Symbol Scanner)


- 1) Make sure the battery has been charged for at least 6-8 hours.
- 2) Unplug from the base the Grey (network) and the Black (power) Cables.
- 3) Wait 20 seconds.
- 4) Replug in the grey cable first then the black cable.
- 5) Scan the first barcode below.

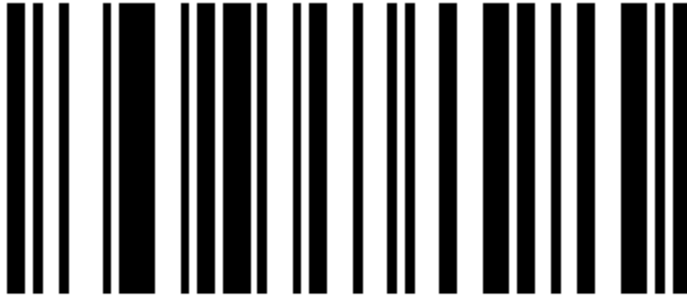


Reset Default Application

- 6) Pair the scanner with the computer by scanning the “**Pair**” barcode (on the base).
- 7) Place the scanner in the base, and **disconnect** the power supply from the base (Reconnect the power supply after 30 seconds)
- 8) Remove the scanner from the base and scan the “**Pair**” barcode (On the base).
- 9) **Press** the following keys in sequence (**Func**, *, **Func**, **BK**) (If done correctly, “System Setup” will be displayed)
- 10) **Press** the #2 and then **enter twice** (should display “Scan Parameters, Func Bk to quit”).
- 11) **Scan the three remaining barcodes below** (from top to bottom), then **press Func, BK, Func, BK**
- 12) **Scan a barcode** (barcode on object, not a programming barcode) into notepad or word to verify this scanner is communicating

Set Defaults

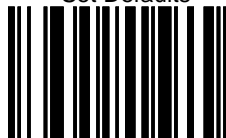

Set USB Synapse defaults

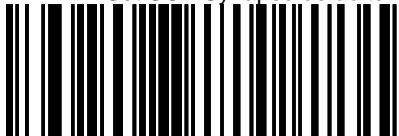

HID Keyboard emulation

